

RUN

Single Sweep

SWR Antenna Cable Loss Cable Length Transmission Generator



MARKERS

Marker 1 L

Marker 2 L

VALUES

FREQ.	SWR	Z	R.L.	PHASE	Rs	Xs
14.130.000	1.16					
15.310.000	1.54					

DISPLAY

Loss x2

Full

Xc / Xl

50 ohm

BW and Q

Enable

FREQUENCY SWEEP LIMITS

Start MHz

Stop MHz

Full Save

Zoom Recall

BANDS

HF

VHF

Steps

TRACE ENABLE AND COLOURS

SWR PHASE / °

|Z| / ohm Rs / ohm

Loss / dB |Xs| / ohm

All None